

## GoPro Mount Kit installation

The mount is designed to securely install any model of GoPro cameras, keeping them as close as possible to the headwear.

The mount is supplied with all the necessary parts to perform an easy and clean installation on a headwear shell or on a compatible visor.

The rubber gasket at the base of the mount avoids rotations when the screw has been tightened. It also fills areas where the curve of the headwear shell does not exactly copies the base of the mount.




To install the mount drill a hole with a 6 mm bit in proper place on the headwear (you might need to make the hole a little larger to make the screw insertion easier).

Before tightening the screw check that the mount is correctly oriented: once tightened, the GoPro can be vertically oriented without loosening the screw of the mount.

The GoPro Mount is also available pre-installed on the Z1 Jed-A or the Z1 Skylight visor.

### Warning!

*User is responsible for proper installation of the product in a way that it does not interfere with canopy openings. By using this product the User accepts full responsibility and implies knowledge that he/she is subject to injuries, losses or death that may occur through its proper or improper use, good or defective. By using this product, User waives any liability of Parasport Italia and its dealers for personal injuries or other damages arising from such use. Use also implies knowledge and application of the usage guidelines here listed.*

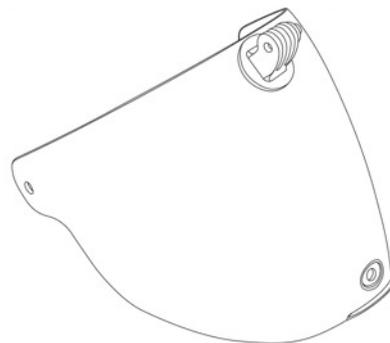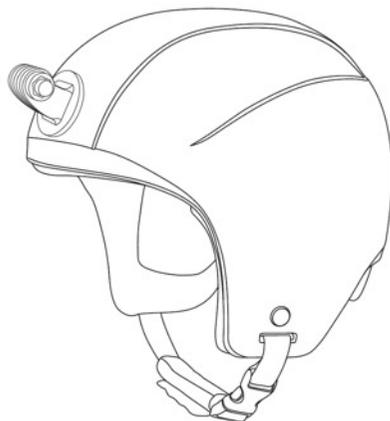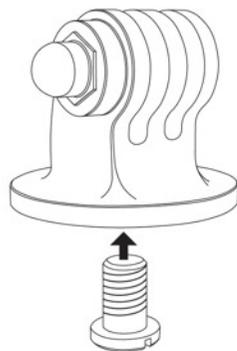

## Installazione del Kit Staffa per GoPro

La staffa è progettata per installare in sicurezza un qualunque modello di videocamera GoPro, mantenendola il più vicino possibile alla scocca del casco.

La staffa viene fornita di tutte le parti necessarie per effettuare una installazione semplice e pulita sulla scocca di un casco o su una visiera compatibile.

La guarnizione in gomma alla base della staffa evita delle rotazioni una volta che la vite è stata ben avvitata. Riempie inoltre quelle aree che possono restare scoperte se la curva della scocca non copia esattamente la base della staffa.

Per installare la staffa praticare un foro in posizione appropriata utilizzando un trapano con una punta da 6 mm (può essere poi necessario allargare leggermente il foro per facilitare il passaggio della vite).

Prima di stringere la vite verificare che la staffa sia orientata correttamente: una volta che la staffa è stata fissata, la GoPro può essere orientata verticalmente senza allentare la vite della staffa.

La staffa è disponibile anche pre-installata sugli Z1 Jed-A o sulla visiera Z1 Skylight.

### Attenzione!

*Il cliente è responsabile della corretta installazione del prodotto in modo che non interferisca con l'apertura del paracadute. Utilizzando questo prodotto l'Utente accetta la piena responsabilità e riconosce il fatto di essere sottoposto a rischio di lesioni, ferite, o morte che possono risultare dall'uso proprio o improprio del prodotto, sia questo perfettamente funzionante o difettoso. Utilizzando questo prodotto, l'Utente solleva da qualunque responsabilità Parasport Italia e i suoi rivenditori per lesioni o altri danni derivanti da tale utilizzo. L'utilizzo implica inoltre la conoscenza e l'applicazione delle norme di utilizzo qui indicate.*